Hitachi (Hong Kong) Ltd.
18th Floor, Ever Gain Centre, 28 On Muk Street,
Shatin, N.T., Hong Kong

Kyushu Hitachi Maxell, Ltd.
4680 Ikata, Fukuchi-Machi, Tagawa-Gun, Fukuoka,
822-1296 Japan

62002411 XYZ 1 (KW) EDCBA

使用說明書
INSTRUCTIONS

HITACHI
Inspire the Next

日立離子美容清潔器
Ion cleansing device

NC-5510

ALKALINE BATTERY(LR03/AAA) EXCLUSIVE USE

一般家庭用

日本原装
Made in Japan

NC-5510

English ····· Page 1~8

中文 ····· 頁 9~16

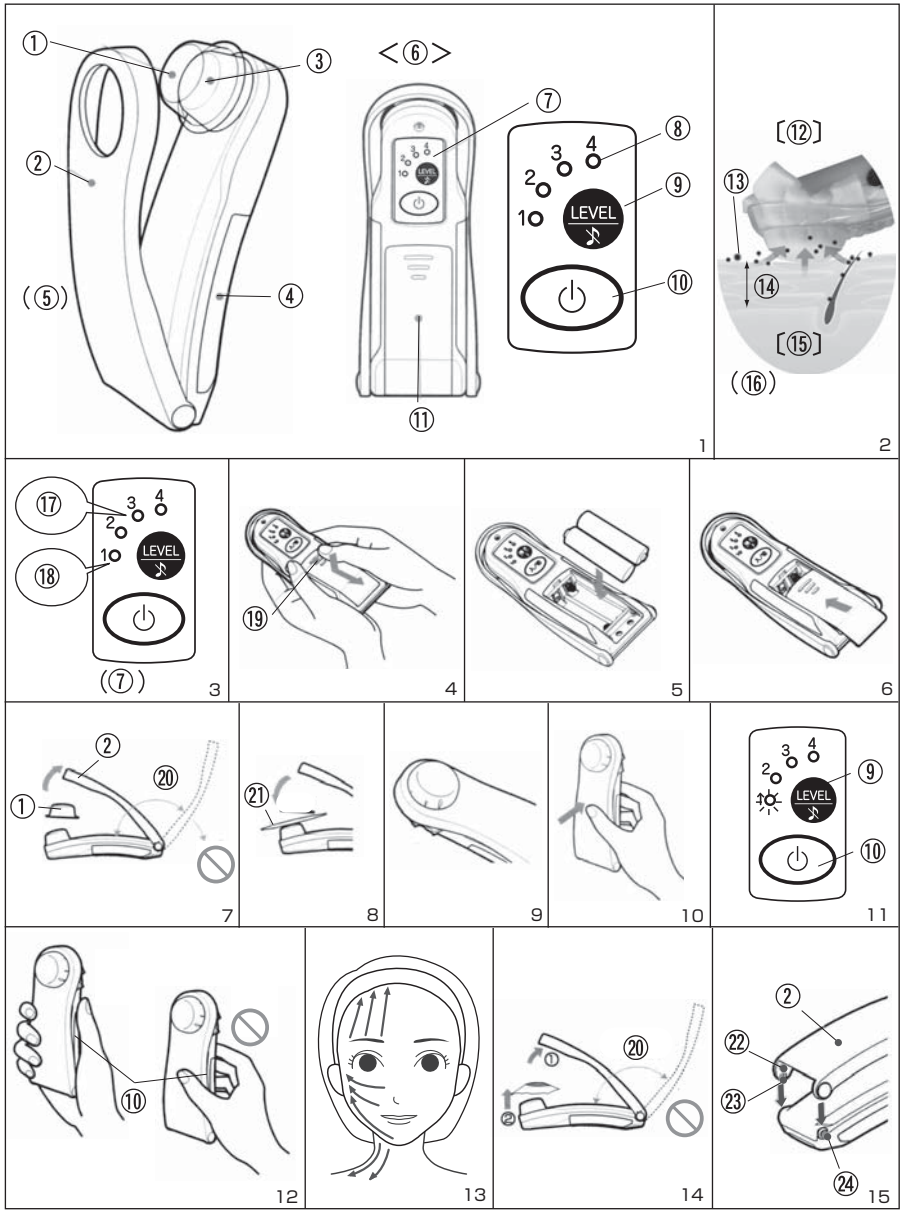

English

Safety precautions

- Precautions described here are intended for safe and correct use of this product and are to prevent injury and damage to you and others before they occur.
- Precautions are classified as follows.
  Make sure to observe the precautions because they are all important in relation to safety.

⚠DANGER	Indicates an imminently dangerous situation in which improper handling may result in death or serious injury to a user.
⚠WARNING	Indicates a dangerous situation in which improper handling could result in death or serious injury to a user.
⚠CAUTION	Indicates a dangerous situation in which improper handling could result in slight injury to a user or damage to property (house, household effects, etc.).

<Examples of pictorial indication>

	The ⃠ symbol indicates "Prohibited" (Do not do this). ⃠"Disassembly prohibited" ⃠"Use prohibited in wet areas"
	The ❗ symbol indicates "Compulsory" (Make sure to do this). ❗"General action"

⚠DANGER

Prohibited	Persons who use the following medical electronic devices should not use this product. (This product may cause the medical electronic devices to malfunction.) - Self-contained medical electronic devices such as a pacemaker - Wearable medical electronic devices such as an electrocardiograph

⚠WARNING

Prohibited	Never use this product by other methods which are not described in this instruction manual. (Cause of an accident, trouble, or failure)
	Use this product only for face and neck. (Cause of an accident or trouble)
	Children should be supervised to ensure that they do not play with the appliance.

⚠WARNING

Prohibited	The following persons should avoid use of this product. (Cause of an accident or trouble) - Persons with heart disease - Persons with an acute (pain) illness - Persons with a fever - Persons with a blood pressure disorder - Persons with an infectious disease - Persons with a tubercular disease - Persons with a malignant tumor - Persons with facial neuralgia - Persons who are pregnant - Persons who are menstruating - Persons with atopic dermatitis - Persons with an allergic predisposition - Persons with particularly sensitive skin - Persons with hemophilia - Persons under dental care - Persons whose blood vessels have expanded due to long time use of steroid hormones or liver function disorder - Persons who are under the influence of alcohol or medication, or who are very tired
	Do not use this product on the following regions. (Cause of an accident or trouble) - Regions where orthopedic treatment was given - Eyeballs and upper eyelids - Wound sites - Facial melanoderma - Mucosal regions, such as inside the mouth - Regions irritated due to pimples or skin rash - Regions which suffer from sensation of pain or perception disorder - Regions where metal, plastic or silicone etc., is embedded under skin - Regions where there is itching, sensation of warmth, or liver spots due to physical stimulus etc. - Regions where skin irritation is caused by cosmetics
	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Make sure	When feeling pain or disorder during use of this product, or sensing anything wrong with your skin after use, stop using this product and consult a dermatologist. (Cause of skin trouble etc.)
	Persons who use this product for the first time should use it while observing the condition of their skin. (Cause of skin trouble or poor physical condition)
Disassembly prohibited	Never modify this product. Only a qualified technician may make repairs. (Cause of a fire, electric shock, injury, or failure)

⚠CAUTION

Prohibited	Check the head for any damage or deformation before use. (Cause of skin damage)
	Never use this product together with other beauty treatment devices at the same time. (Cause of a failure or trouble)
	Never use this product if there is some injury or wound to your skin. (Cause of skin trouble or pain)

⚠CAUTION

Prohibited	Do not drop this product, or give it a strong impact. (Cause of injury or a failure)
Make sure	Failure to observe the following will cause injury or a failure due to heat generation, electrolyte leakage, or bursting of the batteries. - Properly use the batteries according to the indication for use. - After use, make sure to turn OFF the power switch. - Perform periodic inspection (for electrolyte leakage). - When not using this product for one month or more, take out the batteries. - When replacing the batteries, use brand new batteries of the same type for both.
	Remove accessories such as earrings and necklaces, and contact lenses for use. (Cause of an accident or trouble)
	If there is any severe skin disorder or irregularity on your skin surface, or due to downy hair, you may feel strong irritation in rare instances. In this case, avoid using this product on that region. (Cause of an accident or trouble)
	Do not keep the cotton puff on one part of your skin but always keep it in motion. (Cause of skin trouble or poor physical condition)
Use prohibited in wet areas	Never wash the main body with water. And, never soak in water or splash water on it. (Cause of a failure or short circuit)
	Never use or leave this product in places splashed with water or in damp places, such as in a bathroom. (Cause of a failure or short circuit)

Names of parts and their functions (Fig.1)

① Protective cap
For protection during transportation.

② Cover
Keeps the cotton puff set on the head.

③ Head
Set a cotton puff.
(The head section does not vibrate.)

④ Earth plate
There is no effect unless either of the right or left plate is touched.

⑤ Main body

⑥ Rear side

⑦ <Operation panel>

⑧ Level indication lamp (Orange)
This lamp flashes/lights in 4 stages according to the potential level.

⑨ Select button ("LEVEL"/motion sound)
- Every time this button is pressed, an operating sound can be heard and the potential level changes over. (The initial setting is "1.")
- Holding this button down (for approximately 2 seconds) switches the ON-OFF state of motion sound. (The initial setting is "ON.") Upon operation, the potential level also changes over by one stage.

⑩ Power switch ("⏻")
When this switch is pressed, an operating sound can be heard, the switch turns "ON," and the indication lamp of the level stored in the memory flashes.
After an elapse of three minutes, an automatic stop will be made.
When this switch is pressed again, an ending sound can be heard, and the switch turns "OFF."

⑪ Battery cover

What is ion cleansing?

By using the properties of electricity, dirt that is hard to remove by normal face washing is drawn out from pores. Dirt in the air, dead skin cells, sebum, makeup components, etc. Negatively charged fine dirt is drawn out by making the cleansing device side into a positive potential. (Fig.2) ⑫ Positive potential ⑬ Dirt ⑭ Horny layer of skin
⑮ Negative potential ⑯ Image view
★Makeup cannot be removed.

About the memory function

This device is equipped with a memory function for storing the potential level (1 - 4) and motion sound ON/OFF in the memory.
The potential level and motion sound ON/OFF immediately before an automatic stop or turning off the power switch are stored in the memory.
The settings can be changed by button selection during use.
When the batteries are worn or replaced, the memory function is reset back to the initial settings.

About turning off the motion sound

On this device, if the power switch is turned "ON", you will hear a motion sound continuously as a sign of proper functioning.
The motion sound can be turned on and off by holding the select button down (for approximately 2 seconds).
The operating sound/ending sound cannot be turned off.
Upon operation, the potential level also is charged by one stage, so the setting should be made again.

Preparation before use

How to set batteries

- Use only alkaline batteries (LR03/AAA).
  With other batteries, full performance will not be delivered as the strength is low or the battery life is short.
  - Dispose of used batteries according to your local laws and regulations.
- The battery life is about 10 months [when this product is used for about 3 minutes once a day on Hitachi alkaline batteries LR03 (EX-S)].
  (Depending on the level of care and the operating conditions, such that the ambient temperature is low, the number of operating times may decrease.)

● The battery life has expired if no indication lamp flashes/lights even if the power switch is turned ON or if all the level indication lamps go out when the potential level is raised by pressing the select button.
Replace the alkaline batteries with new ones. (Fig. 3)
⑰ All the indication lamps go out when the level is raised by pressing the select button.
⑱ No indication lamp flashes/lights even if the switch is pressed.

1. Remove the battery cover on the rear side of the main body.
Slide in the direction of the arrow while pushing the protrusion as shown. (Fig. 4)
⑲ Protrusion
2. Properly set alkaline batteries (LR03/AAA) according to the indication on the main body. (Fig. 5)

CAUTION
● If batteries are improperly set, operation will fail.
● Change the same type of two new alkaline batteries.

3. Install the battery cover.
Slide the battery cover in the direction of the arrow until it clicks. (Fig. 6)

Before use

⚠WARNING	When sensing anything unusual with your skin or body during use, immediately stop using this product and consult a dermatologist. (Cause of an accident or poor physical condition)
⚠CAUTION	Remove accessories and contact lenses. (Cause of skin trouble or poor physical condition)

● Use this product for skin care within 3 minutes once a day.
★ Do not use this product more than 3 minutes continuously; otherwise it may cause skin trouble.

1. Wash your face to remove dirt and make skin clean.
● Use this product on bare skin without makeup.
2. Attach a cosmetic cotton puff to the main body.
(1) Open the cover and remove the protective cap. (Fig. 7) ⑳ 120 degrees

CAUTION
Do not open the cover more than 120 degrees.
(Cause of detachment of the cover or breakage of the pin)

(2) Attach a cotton puff on the head and close the cover. (Fig. 8)
● Set the cotton puff with care so that it does not slip the head. (Fig. 9)
(3) Firmly press the cover and fix the cotton puff. (Fig. 10) ㉑ Cotton puff

Request Use a commercially available cosmetic cotton puff.
However, a small cotton puff, 5 cm or less on a side, may not be attachable.

How to use

⚠WARNING	Do not use this product around eyes and ears. (Cause of an accident or poor physical condition)
⚠CAUTION	Never use this product when your skin is injured or damaged. (Cause of skin trouble or pain)

1. Apply toner on the cotton puff.
Use your regular toner or wiping toner with an exfoliating effect.
(Do not use a milky lotion or gel.)
● Apply it until it seeps through the cotton puff to the rear side.
(Until the head can be seen through)

Some toners (made only of mineral spring water or water, etc.) may not show effects sufficiently.

2. Press the power switch on the operation panel on the rear side of the main body. (Fig. 11)
● After an operating sound can be heard, you will hear a motion sound continuously.
● For the first use, the level indication lamp "1" flashes.
● The motion sound is stopped by holding the select button down (for approximately 2 seconds). The indication lamp "1" lights and the lamp "2" flashes.
3. Select the potential level by the select button on the operation panel.
A four-stage level can be selected from [1] to [4]. (After [4], [1] follows.)
The indication lamp of the selected level flashes, and the lower-level lamp(s) lights.

The potential level and motion sound ON/OFF immediately before an automatic stop or turning OFF the power switch are stored in the memory.

● Select the potential level suitable for your skin (at a level where you do not feel a tingling sensation.)

Use at [1] is recommended for people who use this product for the first time and who have sensitive skin or sense something wrong.

4. Hold the main body by hand touching the side plate on either side. (Fig. 12)
● Dirt on skin cannot be removed if the side plate of the main body is not touched by hand.

★ Always hold the main body with your hand touching the side plate either on the right or left side.

5. Lightly apply the cotton puff on skin and move it slowly.
● Use the product for 3 minutes at maximum.
An automatic stop is made when 3 minutes have elapsed after the switch is turned on.

⚠CAUTION	Do not keep the cotton puff on one part of your skin but always keep it in motion. (Cause of skin trouble or poor physical condition)

● Lightly apply it and slowly move as if sliding from the inside to the outside. (Fig. 13)
● If the moisture in the cotton puff becomes insufficient or if it is hard to slide, replenish the toner.

- Do not use it on the same part of skin for more than 10 seconds.

★ If you feel a slight current stimulation (a tingling sensation) during use, replenish the toner.

- If you still feel a tingling sensation after replenishing the toner, press the select button and lower the level.

CAUTION

Do not touch the operation panel on the rear side during use.
(The switch may turn off or the potential level or vibration may change over.)

6. An automatic stop is made when 3 minutes have elapsed after the power switch is turned on.
   - When the sound cannot be heard, this means automatic stop has been made.
7. Open the cover and remove the cotton puff. (Fig. 14)

CAUTION

Do not open the cover more than 120 degrees.
(Cause of detachment of the cover or breakage of the joint)

- Remove the cotton puff after use. Wipe away the toner attached to the main body such as the head and the cover with tissue paper, etc.

CAUTION

★Avoid continuous use because it will strain the skin and cause skin trouble.
★Dispose of the cotton puff once it is used, and do not use it again.
(Cause of skin trouble)
★Always wipe away the toner attached to the main body.
(toner will get inside the main body and cause a malfunction.)

- After use, take care of your skin with toner, milky lotion, etc., as usual.

How to attach the cover when it comes off.

Align the cover grooves with the hinges of the main body, and push it in. (Fig. 15)
㉒ Hole ㉓ Groove ㉔ Hinge
When the hinges get in the holes in the cover, it clicks.

About the battery life

The battery life has expired if no indication lamp flashes/lights even if the power switch is turned "ON" or if all the level indication lamps go out when the "potential" level is raised by pressing the select button.
Replace the alkaline batteries with new ones.

- When the batteries are worn or replaced, the memory function is reset back to the initial settings.

Care for the main body

- Wipe dirt on the main body with a cloth moistened with water and firmly squeezed.

⚠CAUTION	Do not wash the main body with water. And, do not soak in water or splash water on it. (Cause of a failure)
	Make sure to turn OFF the power switch. (Improperly turning on the switch may cause irritation or a malfunction or short circuit.)

CAUTION ★Do not use alcohol, benzine, or thinner.
(Cause of deformation or discoloration)

How to preserve

Close the cover and preserve in an area with little humidity and dust.

⚠WARNING	Do not leave this product in places splashed with water or in damp places, such as in a bathroom. (Cause of a short circuit or failure)
	Do not tie the cord of the power adaptor, or wind the cord around the power adaptor. (If the cord breaks, a short circuit or disconnection may occur.)

CAUTION ★Do not leave this product in areas exposed to direct sunlight (inside of a vehicle in summer, etc.) or near heaters.
(Cause of deformation or discoloration)

Specifications

Power supply	3V DC; two alkaline batteries (LR03/AAA)

Disposal of the product

⚠WARNING	Do not disassemble except when disposing of the product.

This product includes recyclable parts.
For disposal of the parts, observe your local laws and regulations etc.

中文

安全上的注意事項

- 此處表示的注意事項，是為了讓您安全、正確地使用本產品，以防止對您以及他人造成危害與損害。
- 注意事項區分如下。
  每一項均是有關安全的重要內容，請務必遵守。

⚠危險	如果錯誤使用會造成使用者死亡或重傷之緊迫的危害程度。
⚠警告	如果錯誤使用可能會造成使用者死亡或重傷的危害程度。
⚠注意	如果錯誤使用可能會造成使用者輕傷或損壞物品（房屋、家庭用具等）的危害和損壞程度。

＜圖示例＞

	記號，表示“禁止”(絕對不要做)的行為。 “禁止分解”　“禁止在有水的場所使用” “禁止用濕手觸摸”
	記號，表示“強制”(必須做)的行為。 “一般的行為”　“將電源插頭從插座上拔下”

⚠危險

禁止	使用以下醫療電子儀器的人絕對不可使用。 （否則會引起醫療電子儀器操作失誤） ・心臟除顫器等的體內埋入型醫療電子儀器。 ・心電儀等安裝式醫療電子儀器。

⚠警告

禁止	不可用使用說明書上記載以外的方法。 （否則會造成事故或損傷、故障的原因）
	不可用於臉和頸部以外。（否則會造成事故或損傷的原因）
	應對兒童進行監督，確保其不玩耍本器具。

⚠警告

禁止	下列人士不可使用。（否則會造成事故或損傷的原因） ●心臟病患者●急性(疼痛性)疾患者●有熱性疾患者 ●血壓異常者●感染症疾患者●結核病患者●惡性腫瘤患者 ●面神經疾患者●孕婦●經期中●特應過敏性皮膚炎患者●過敏體質者 ●對皮膚特別敏感者●血液病疾患者●牙病治療中 ●類固醇類激素劑長期使用者、肝功能障礙引起的毛細血管擴張者 ●飲酒、服藥中、過度疲勞時
	以下部位不可使用。（否則會造成事故或損傷的原因） ●整形手術後的部位●眼球及上眼皮●傷口 ●面部黑皮症●口腔內等粘膜部位 ●因粉刺或疙瘩引起炎症的部位●痛覺、知覺障礙的的部位 ●在皮膚下埋入金屬、塑料、硅等的部位 ●搔癢、發燒、物理性刺激等引起的病態性褐斑的部位 ●因化妝品等引起皮炎的部位
	生理、感覺或心理能力欠佳或缺少經驗及知識的人士（包括兒童）不得使用本器具，除非他們得到其安全責任人在本器具使用方面的監督或指導。
務必遵守	使用中感覺疼痛、不舒服、或使用後感覺皮膚異常時，立即停止使用，並請諮詢專門醫師。（否則會造成皮膚損傷等的原因）
	初次使用者，請根據自己皮膚的適應狀況進行使用。（否則會造成皮膚損傷、身體不適的原因）
禁止分解	不可擅自改造。也不可讓修理技術人員以外的人進行修理。（否則會造成火災、觸電、受傷、故障的原因）

⚠注意

禁止	使用之前，請確認導頭有無損傷或變形。（否則會造成損傷皮膚的原因）
	絕對不可與其他美容器具並用。（否則會造成事故或損傷的原因）
	皮膚上有傷口或炎症時絕對不可使用。（否則會造成皮膚損傷或疼痛的原因）
	不可掉落或施予強烈的衝撞。（否則會造成受傷或故障的原因）

⚠注意

務必遵守	請遵守以下事項，否則會引起乾電池發熱、漏液、破裂造成受傷或事故的原因。 ● 按照乾電池的使用標示正確使用。 ● 使用後必須將開關置於“關”。 ● 定期檢查有無漏液。 ● 1個月以上不使用時，請取出乾電池。 ● 更換電池時，請一起更換2個相同種類的新電池後使用。
	務必取下耳環、項鍊等裝飾品以及隱形眼鏡後使用。 （否則會造成事故或損傷的原因）
	由於嚴重皮膚粗糙或皮膚表面凹凸時或者根據汗毛或鬍鬚狀況等，也會有少見的強烈刺激感。此時，應盡量避免在該部位使用。 （否則會造成事故或損傷的原因）
	化妝棉及導頭不能在皮膚的同一部位停留要不停地移動。 （否則會造成皮膚損傷或身體不適的原因）
禁止在有水的場所使用	不可用水沖洗本體。也不可浸泡或淋濕本體。 (否則會造成故障或短路的原因)
	不可在浴室等容易淋水或潮濕的地方使用或放置。 （否則會造成故障或短路的原因）

各部名稱及動作（圖1）

① 護罩
用於輸送時的保護。
② 蓋板
固定導頭部上安裝的化妝棉。
③ 導頭
安裝化妝棉。
(導頭部不振動。)
④ 側板
如果不接觸左或右邊則不會有效。
⑤ 本體
⑥ 背面
⑦ ＜操作面板＞
⑧ 強度表示指示燈
(橙色)
分4級強度進行閃亮/點亮。
⑨ 切換按鈕(“強度”/動作聲)
・每按下一次按鈕操作聲鳴響，電流“強度”就會切換。
(初始為“1”的設定狀態。)
・持續按下(約2秒鐘)可以切換動作聲的ON-OFF。
(初始為“ON”的設定狀態。)
操作時，電流“強度”可以切換1級。
⑩ 開關(“⏻”)
按下開關時，操作聲鳴響變成“開”狀態，已記憶的強度表示指示燈閃亮。
超過3分鐘後自動停止。再次按下開關，結束聲鳴響即可“關”。
⑪ 電池蓋

什麼叫離子清潔?

利用電流的性質將平時洗臉時不易洗淨的毛孔深處的污垢導出洗淨。
空氣的污垢、舊角質、皮脂、化妝成分等
通過將清潔儀器置於正電極，可以將在負電極離子化的微細污垢導出。(圖2)
⑫正電極　⑬污垢　⑭皮膚角質層　⑮負電極　⑯示意圖
★不能卸妝。

記憶功能

本儀器具有記憶電流“強度”等級(1～4)和動作聲ON和OFF的記憶功能。
可以記憶自動停止或“關”開關之前的“強度”等級和“動作聲的ON－OFF”。
設定變更時，可以通過使用中的按鈕進行切換。
乾電池的消耗或更換時，記憶功能會還原並返回到初始設定。

有關動作聲的消音

● 開關“開”後，動作聲連續鳴響，表示本儀器的功能操作正常。
通過持續按下(約2秒鐘)切換按鈕，可以切換動作聲停止或鳴響。
操作聲/結束聲不能消除。
操作時，由於電流“強度”會切換一個等級，請重新設定等級。

使用前的準備

乾電池的裝入方法

● 不可使用鹼性乾電池(LR03/AAA)以外的電池。
其它電池的功率弱，電池壽命短等不能充分發揮性能。
・使用完的乾電池，請按照居住地區的有關條例等規定進行處理。
● 電池壽命為約10個月。[日立鹼性乾電池LR03(EX-S)每天一次使用約3分鐘時]
(根據保養方法、週圍溫度低等使用條件的不同，可能會減少使用次數。)
即使按下“開”開關，表示指示燈也不閃亮/點亮、或者按下切換按鈕提昇“強度”等級，強度表示指示燈全部熄滅時，表示乾電池已用完。
請更換新鹼性乾電池。(圖3)
⑰・按下切換按鈕提昇等級時，強度表示指示燈熄滅。
⑱・即使按下開關表示指示燈也不閃亮或點亮。

1. 拆下本體背面的電池蓋。
如圖所示，按下突起部並朝箭頭方向滑動。(圖4) ⑲突起
2. 按照本體上的表示將鹼性乾電池(LR03/AAA)正確放入。(圖5)

注意
● 乾電池的裝入方法錯誤時不會運作。
● 應同時更換2個相同種類的新鹼性乾電池。

3. 裝上電池蓋。
將電池蓋朝箭頭方向滑動，按入直至發出聲音為止。(圖6)

使用之前

⚠警告	使用中，皮膚或身體感到異常時立即停止使用，並請諮詢專門醫師。 （否則會造成事故或引起身體不適的原因）
⚠注意	請取下金屬飾物及隱形眼鏡。 （否則會造成皮膚受傷或身體不適的原因）

・保養皮膚時，一天要保持一次3分鐘以內。
★超過3分鐘連續使用時，會引起皮膚損傷的原因，請不要使用。

1. 用潔顏沖洗污垢，並清洗乾淨。
   ・請洗淨化妝後裸膚使用。
2. 在本體上安裝化妝棉。
   (1) 打開蓋板取下護罩。(圖6) ⑳ 120度

注意

蓋板請不要打開120度以上。(否則會造成蓋板脫落或損壞鉸位的原因)

   (2) 在導頭上蓋上化妝棉後，蓋上蓋板。(圖7)　　㉑化妝棉
   ・安裝時注意不要使化妝棉偏移導頭。(圖8)
   (3)將蓋板確實壓住，並固定化妝棉。(圖9)

須知

請使用市售的化妝棉。
如果是四方的一邊為5cm以下的小化妝棉可能裝不上，請注意。

使用方法

⚠警告	不可清潔眼睛和耳朵週圍。 （否則會造成事故或引起身體不適的原因）
⚠注意	皮膚受傷或有傷口時絕對不可使用。 （否則會造成皮膚損傷或疼痛的原因）

1. 在化妝棉上浸濕化妝水。
   請使用平時使用的化妝水或具有去除角質效果的化妝水。
   (請不要使用乳液狀或凝膠狀的化妝水。)
   ・將化妝水滲透至化妝棉背面程度。(可以稍微看到導頭的程度)

在部分化妝水(礦泉或水等)上可能有不見效果的情況。

2. 按下本體背面的操作面板的開關。(圖11)
   ・操作聲鳴響，動作聲也會連續鳴響。
   ・初次使用時，等級表示指示燈“1”會閃亮。
   ・持續按下(約2秒鐘)切換按鈕，可以停止動作聲。
   強度表示指示燈“1”變成點亮，“2”進行閃亮。

3. 按下操作面板的切換按鈕可以選擇“強度”等級。
   可以選擇“1”到“4”的4等級。
   (“4”的下一個檔級是“1”)
   選擇等級後的強度表示指示燈閃亮，其以下等級的指示燈點亮。
   請選擇適合自己皮膚的“強度”等級(沒有觸電感的程度)。採用記憶功能可以記憶自動停止或”切”開關前的“強度”等級與“動作聲的ON-OFF”。

※初次使用者、皮膚敏感者或有不適感者，建議使用“1”等級。

4. 握住本體時用手指接觸側板。(圖12)
   ・如果手指不接觸本體的側板則不能去除皮膚的污垢。

★務必用手指接觸左或右邊的側板後握住本體。

5. 將化妝棉貼在皮膚上緩慢地移動。
   ・使用時間為3分鐘以內。打開開關後超過3分鐘就會自動停止。

⚠注意	化妝棉不可在皮膚上的同一部位停留要不停地移動。 （否則會造成皮膚損傷或身體不適的原因）

   ・輕輕貼著，從內側向外側滑動式緩慢地移動。(圖13)
   ・如果化妝棉沒有水分或滑動不順暢時，請補充化妝水。
   ・同一部位的使用時間為10秒鐘以內。
   ★使用中，如果感覺有微電流的刺激(觸電感)感時，請少量增加著化妝水使用。
   ・如果添加化妝水後仍有“觸電感”的感覺時，請按下切換按鈕降低強度等級。

注意

使用中，不可觸摸背面的操作面板。
(否則會造成關閉開關、“強度”等級或振動切換的情況。)

6. 打開開關3分鐘後自動停止。
   ・自動停止時，以結束聲告知。
7. 打開蓋板取下化妝棉。(圖14)

注意

蓋板請不要打開120度以上。(否則會造成蓋板脫落或損壞鉸位的原因)

   ・使用後取下化妝棉，用紙巾等擦拭導頭及蓋板等本體上沾附的化妝水。

注意

★連續使用的話，會給皮膚帶來負擔，造成皮膚損傷的原因，請不要連續使用。
★用過一次的化妝棉，必須扔掉，不可再利用。(否則會引起皮膚損傷的原因)
★務必擦淨本體上沾附的化妝水。(否則會因化妝水進入內部造成故障的原因)

   ・使用後，請按照平時的護理方法使用化妝水和乳液等。

萬一，蓋板脫落時的安裝方法

將蓋板的溝槽對準鉸鏈按入。(圖15) ㉒ 孔　㉓ 溝槽　㉔ 鉸鏈
鉸鏈插入蓋板的孔中時發出響聲。

乾電池的使用壽命

即使“開”開關強度表示指示燈也不閃亮/點亮、或者按下切換按鈕提昇“強度”等級，表示指示燈全部熄滅時，表示乾電池已用完。
請更換新鹼性乾電池。

- 乾電池的消耗或更換時，記憶功能會還原並返回到初始設定。

本體的清潔保養

・本體上的污垢，請用擰乾的濕布擦拭。

⚠注意	不可用水沖洗本體。也不可浸泡或淋濕本體。(否則會造成故障的原因)
	務必關閉開關。 (否則會因錯誤打開開關而受到刺激或造成操作失誤、短路的原因)

注意 ★不可使用酒精、揮發油、稀釋劑等。(否則會造成變形或變色的原因)

保存方法

將本體蓋上蓋板保管在潮濕及灰塵少的地方。

⚠警告	不可在浴室等容易淋水或潮濕的地方放置。 (否則會造成短路或故障的原因)
	不可用充電變壓器的電源線捆綁、或捲繞在充電變壓器上。 (否則會因電源線損傷造成短路或斷線的原因)

注意 ★不可放置在陽光直接照射的地方(夏季時汽車內等)、熱器具的附近。
(否則會造成變形或變色的原因)

規格

電源	DC3V 鹼性乾電池(LR03/AAA)　2個

廢棄產品時須知

⚠警告	請勿拆開產品，廢棄時除外。

本產品中，還有其它可以回收再利用的部件。
廢棄部件時，請按照居住地區的有關條例等規定進行處理。